

SHARP®

ELECTRONIC PRINTING CALCULATOR

CALCULADORA IMPRESORA ELECTRÓNICA

OPERATION MANUAL

MANUAL DE MANEJO

EL-1750PⅢ

WARNING – FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SHARP CORPORATION

PRINTED IN CHINA / IMPRESO EN CHINA
04ET(TINSE0744EH02)

OPERATIONAL NOTES

- To insure trouble-free operation of your SHARP calculator, we recommend the following:
- The calculator should be kept in areas free from extreme temperature changes, moisture, and dust.
 - A soft, dry cloth should be used to clean the calculator. Do not use solvents or a wet cloth.
 - Since this product is not waterproof, do not use it or store it where fluids, for example water, can splash onto it. Raindrops, water spray, juice, coffee, steam, perspiration, etc. will also cause malfunction.
 - If service should be required, use only a SHARP servicing dealer, a SHARP approved service facility or SHARP repair service.

 
SHARP will not be liable nor responsible for any incidental or consequential economic or property damage caused by misuse and/or malfunctions of this product and its peripherals, unless such liability is acknowledged by law.

USING THE CALCULATOR FOR THE FIRST TIME

First, pull out the insulation sheet for the memory protection battery (installed for retaining the date/time/tax rate information). Reset the calculator to initialize the unit's state, then adjust the date and time before using the calculator.

Removing the insulation sheet, and resetting

- Pull out the insulation sheet for the memory protection battery.

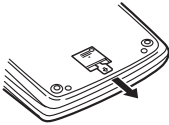

- Press the RESET switch located on the back of the unit.

(See "RESETTING THE UNIT".)

* The clock starts, indicating the current date and time as January 1, 2005, 12:00:00 a.m.

Adjusting date and time

Example: When the date is September 15, 2004, and the time is 3:38 p.m.

Operation	Display
9 15 2004	9-15-2004
15 38	3-38 00 P
	0.

(see "GRAND TOTAL / RATESETTING MODE SELECTOR")

* When the adjustment is complete, the clock starts at 3:38:00 p.m.

OPERATING CONTROLS

OFF ON **POWER SWITCH; PRINT / ITEM COUNT MODE SELECTOR:**

OFF: Power Off

P: Power ON. Set to the non print mode.

P: Power ON. Set to the print mode.

P+IC: Power ON. Set to the print and item count mode.

- For addition or subtraction, each time is pressed, 1 is added to the item counter, and each time is pressed, 1 is subtracted.
 - The count is printed when the calculated result is obtained.
 - Pressing of clears the counter.
- When the total/rate setting mode selector is in the ON position (GT), the counter will count the number of times that the calculation results have been stored in the grand total memory. To print and clear the count, press the key.
- The memory item counter will count the number of times that the key has been pressed in the addition.

Note:• Each time the key is used in the subtraction, 1 will be subtracted from the count.

- The count is printed when the memory is recalled.
- Pressing of the key clears the counter.

Note: The counter has a maximum capacity of 3 digits (up to ±999). If the count exceeds the maximum, the counter will recount from zero.

ROUNDING SELECTOR:

Example: Set Decimal Selector to 2.

4 ÷ 9 = 0.444 ... , 5 ÷ 9 = 0.555 ...

	4 9	5 9
	0.45	0.56
	0.44	0.56
	0.44	0.55

Note: The decimal point floats during successive calculation by the use of or . If the decimal selector is set to "F" then the answer is always rounded down ().

GT **GRAND TOTAL / RATE SETTING MODE SELECTOR:**

GT: Grand Total

F: Neutral

RATE SET: To set the date, time, and tax rate, set this switch at the "RATE SET" position.

Date:

- Enter in the order of month, day and year, then press to complete the entry.
- Use to separate month, day, and year.
- When is pressed, the number entered is evaluated and displayed as "date" if the value is within the following range; "Error" is displayed otherwise, and the previously set date is restored.
Month: 1 - 12; day: 1 - 31; Year: 2000 - 2099 (in 4 digits) or 00 - 99 (in 2 digits)

Time:

- Enter in the order of hour, minutes, then press to complete the entry.
(There is no entry available for the seconds value. The clock starts at zero second.)
- If the hour/minute digit is less than 10, it is not necessary to enter the first digit "0".
- Use to separate hour and minute values.
- When is pressed, the number entered is evaluated and displayed as "time" if the value is within the following range; "Error" is displayed otherwise, and the previously set time is restored.
Hour: 0 - 23 (24-hour system for the hour entry), Minute: 0 - 59

Tax rate:

- Press three times, enter the tax rate, followed by .
- A maximum of 4 digits can be stored (decimal point is not counted as a digit).
- Only one rate can be stored. If you enter a new rate, the previous rate will be cleared.

DECIMAL / ADD MODE SELECTOR:

3 2 0: Presets the number of decimal places in the answer.

F: The answer is displayed in the floating decimal system.

A: The decimal point in addition and subtraction entries is automatically positioned to the 2nd digit from the lowest digit of entry number. Use of the add mode permits addition and subtraction of numbers without entry of the decimal point. Use of and will automatically override the add mode and decimally correct answers will be printed.

- CLOCK / CALENDAR KEY:**
 - Each time this key is pressed, the mode switches.
 - Calculation mode → Date display mode → Clock display mode → Calculation mode
 - Use this key also to adjust date and time (see "GRAND TOTAL / RATE SETTING MODE SELECTOR").

PAPER FEED KEY

LAST DIGIT CORRECTION KEY

NON-ADD / SUBTOTAL KEY:

Non-add – When this key is pressed right after an entry of a number in the Print mode, the entry is printed on the left-hand side with the symbol "#". This key is used to print out numbers not subjects to calculation such as code, date, etc.

Subtotal – Used to get subtotal(s) of additions and/or subtractions. When pressed following the or key, the subtotal is printed with the symbol "0" and the calculation may be continued.

By pressing this key even in the Non-print mode, the displayed number is printed without any symbol.

- When the POWER SWITCH; PRINT / ITEM COUNT MODE SELECTOR is set "-", "P" or "P+IC" position, and Date or Clock is displayed, press this key to print the displayed contents, including "#" symbol, from the left side of the paper roll.
Example:
Date printing
#9 • 15 • 2004 • • • • • (when the date is September 15, 2004)
Clock printing
#10 • 30 • • • • • (when the time is 10:30 a.m.)
#6 • 25 • • • • • (when the time is 6:25 p.m.)
- When the Date / Clock printing is complete, the Calculation mode is restored.

CLEAR / CLEAR ENTRY KEY

Press this key twice, followed by to print the set tax rate.

TOTAL KEY

EQUAL KEY

CHANGE SIGN KEY:

Changes the algebraic sign of a number (i.e., positive to negative or negative to positive).

RECALL AND CLEAR MEMORY KEY

RECALL MEMORY KEY

TAX-INCLUDING KEY

PRE-TAX KEY

AVERAGE KEY:

Used to calculate the average.

GRAND TOTAL KEY

COST PRICE ENTRY KEY:

Press this key to enter the cost price.

SELLING PRICE ENTRY KEY:

Press this key to enter the selling price.

MARGIN ENTRY KEY:

Press this key to enter the margin.

DISPLAY SYMBOLS:

- M** : Appears when a number is in the memory.
- : Appears when a number is negative.
- G** : Appears when a number is in the grand total memory.
- E** : Appears when an overflow or other error is detected.

TAX+ : Appears when the total calculated includes tax.

TAX– : Appears when the total calculated excludes tax.

TAX : Appears when the tax rate is set.

INK ROLLER REPLACEMENT

If printing is blurry even when the ink roller is in the proper position, replace the roller.

Ink roller: Type EA-772R

WARNING
APPLYING INK TO WORN INK ROLLER OR USE OF UNAPPROVED INK ROLLER MAY CAUSE SERIOUS DAMAGE TO PRINTER.

- Set the power switch to OFF.
- Remove the printer cover. (Fig. 1)
- Hold the top of the ink roller and remove the roller by pulling it toward you and then upward. (Fig. 2)
- Install the new ink roller in the correct position. Make sure that the roller is securely in place. (Fig. 3)
- Put back the printer cover.



Fig. 1

 


Fig. 2

 


Fig. 3

Cleaning the printing mechanism

If the print becomes dull after long time usage, clean the printing wheel according to the following procedures:

- Remove the printer cover and the ink roller.
- Install the paper roll and feed it until it comes out of the front of the printing mechanism.
- Put a small brush (like a tooth brush) lightly to the printing wheel and clean it by pressing .
- Put back the ink roller and the printer cover.

Note: • Do not rotate the printing mechanism manually, this may damage the printer.

PAPER ROLL REPLACEMENT

Never insert paper roll if torn. Doing so will cause paper to jam. Always cut leading edge with scissors first.

- Insert the leading edge of the paper roll into the opening. (Fig. 1)
- Turn the power on and feed the paper by pressing . (Fig. 2)
- Lift the attached metal paper holder up and insert the paper roll to the paper holder. (Fig. 3)

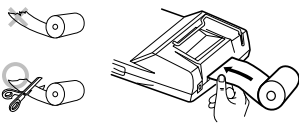 


Fig. 1



Fig. 2



 
Fig. 3

DO NOT PULL PAPER BACKWARDS AS THIS MAY CAUSE DAMAGE TO PRINTING MECHANISM.

HOW TO CONNECT THE AC ADAPTOR

This machine can also be operated on AC power by use of AC Adaptor. When the AC adaptor is connected to the calculator, the power source is automatically switched over from dry batteries to AC power source.

AC adaptor: Model EA-63A, EA-28A

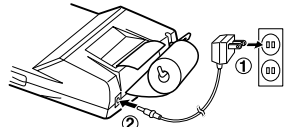

CAUTION

 
Use of other than the AC adaptor EA-63A/28A may apply improper voltage to your SHARP calculator and will cause damage.

BATTERY REPLACEMENT (OPTION)

To install or Replace Batteries – When the battery power becomes weak, printing may be halted, and displayed images may disappear. If such symptoms are observed, replace the batteries with new ones.

- Set the power switch to OFF.
- Remove the battery cover by sliding it in the direction of the arrow on the cover.
- Replace the batteries. Be sure that the "+" and "-" marks on the battery correspond to the "+" and "-" marks in the calculator. Always put back the 4 batteries at the same time.
- Put back the battery cover.

Battery: Manganese dry battery, size AA (or R6) × 4

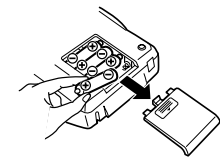

- If the leaked electrolyte gets into eyes, wash off with clean water, and consult your doctor immediately.
- If the leaked electrolyte gets on your skin or clothes, wash off thoroughly with water.
- Remove batteries if not used for prolonged periods of time.
- Do not leave dead batteries in the unit.
- Do not mix new and used batteries and/or battery types.

- Si el electrolito fugado entra en contacto con sus ojos, lávelos con agua limpia, y consulte inmediatamente a su médico.
- Si el electrolito fugado entra en contacto con su piel o ropa, lávela a fondo con agua.
- Cuando no vaya a utilizar las pilas durante mucho tiempo, extráigalas.
- No deje pilas agotadas en la unidad.
- No mezcle pilas nuevas con viejas, ni pilas de tipos diferentes.

TECLA DEL RELOJ / CALENDARIO:

- Cada vez que pulse esta tecla, el modo cambiará.
- Modo de cálculo → Modo de visualización de la fecha → Modo de visualización del reloj → Modo de cálculo
- Utilice esta tecla para ajustar también la fecha y la hora (consulte "SELECTOR DEL MODO DE TOTAL GLOBAL / FIJACIÓN DE TASA").

TECLA DE AVANCE DEL PAPEL

TECLA DE CORRECCIÓN DE ÚLTIMO DÍGITO

TECLA DE NO SUMA / TOTAL PARCIAL:

- No-suma – Cuando se aprieta esta tecla inmediatamente después de haber ingresado un número en el modo de impresión, el número registrado se imprime a la izquierda, junto con el símbolo "#". Esta tecla se usa para imprimir números que no están sujetos a cálculos como, por ejemplo, códigos, fechas, etc.
- Total parcial – Se usa para obtener uno o varios totales parciales de sumas y/o restas. Cuando se aprieta a continuación de la tecla o , se imprimirá el total parcial junto con el símbolo "0" pudiéndose seguir con los cálculos.
- Apretando esta tecla incluso en el modo de no impresión, el número visualizado se imprimirá sin ningún símbolo.
- Cuando el INTERRUPTOR DE LA ALIMENTACIÓN; SELECTOR DEL MODO DE IMPRESIÓN / MODO PARA CONTAR ARTÍCULOS esté en la posición "-" o "P" o "P+IC", y esté visualizándose la fecha o la hora, pulse esta tecla para imprimir el contenido visualizado, incluyendo el símbolo "#", desde el lado derecho del rollo de papel.
Ejemplo:
Impresión de la fecha
#9 • 15 • 2004 • • • • • (cuando la fecha sea el 15 de setiembre de 2004)
Impresión del reloj
#10 • 30 • • • • • (cuando la hora sea 10:30 a.m.)
#6 • 25 • • • • • (cuando la hora sea 6:25 p.m.)
- Cuando finalice la impresión de la fecha / hora, volverá al modo de cálculo.

TECLA DE BORRADO / BORRADO DE ENTRADA

Presione esta tecla dos veces, seguida por para imprimir la tasa de impuestos establecida.

TECLA TOTAL

TECLA IGUAL

TECLA DE CAMBIO DE SIGNO:

Cambia el signo algebraico de un número (es decir, de positivo a negativo o de negativo a positivo).

TECLA DE TOTAL Y BORRADO DE MEMORIA

TECLA DE TOTAL PARCIAL EN MEMORIA

TECLA DE INCLUSIÓN DE IMPUESTOS

TECLA DE ANTES DE IMPUESTOS

TECLA DE PROMEDIO:

Se usa para calcular el promedio.

TECLA DE TOTAL GLOBAL

TECLA DE INTRODUCCIÓN DEL PRECIO DE COSTE:

Pulse esta tecla para introducir el precio de coste.

TECLA DE INTRODUCCIÓN DEL PRECIO DE VENTA:

Pulse esta tecla para introducir el precio de venta.

TECLA DE INTRODUCCIÓN DEL MARGEN:

Pulse esta tecla para introducir el margen.

SÍMBOLOS DEL VISUALIZADOR:

- M** : Aparece cuando un número se almacena en la memoria.
- : Aparece cuando el número es negativo.
- G** : Aparece cuando un número está en la memoria de total global.
- E** : Aparece cuando se detecta un error o se supera la capacidad.
- TAX+** : Aparece cuando el total calculado incluye impuesto.
- TAX–** : Aparece cuando el total calculado excluye impuesto.
- TAX** : Aparece cuando se establece la tasa de impuestos.

CAMBIO DEL RODILLO ENTINTADOR

Si la impresión queda borrosa aunque esté bien colocado el rodillo entintador, reemplace el rodillo.

Rodillo entintador: Tipo EA-772R

ADVERTENCIA
ECHANDO TINTA EN UN RODILLO ENTINTADOR ROTO O USANDO UN RODILLO ENTINTADOR NO AUTORIZADO PUEDE CAUSAR DETERIORES GRAVES EN LA IMPRESORA.

- Ponga el interruptor de la alimentación en "OFF".
- Saque la tapa de la impresora. (Fig. 1)
- Sujete la parte superior del rodillo entintador y extraiga el rodillo tirando de él hacia usted y hacia arriba. (Fig. 2)
- Instale el nuevo rodillo entintador en la posición correcta. Cerciórese de que el rodillo esté firmemente colocado en su sitio. (Fig. 3)
- Ponga de nuevo en su lugar la tapa de la impresora.

 


Fig. 2

 


Fig. 3

Limpieza del mecanismo de impresión

Si la impresión se debilita después de usar la calculadora durante largo tiempo, limpie la rueda de impresión de acuerdo con el siguiente procedimiento:

- Quite la tapa de la impresora y el rodillo entintador.
- Saque el rollo de papel y hacerlo avanzar hasta que salga por la parte delantera del mecanismo de impresión.
- Apoye un cepillo pequeño (similar a un cepillo de dientes) ligeramente sobre la rueda de impresión y límpiela pulsando .
- Vuelva a colocar el rodillo entintador y la tapa de la impresora.

Note:• No trate de girar la rueda de impresión manualmente, ya que de lo contrario podría dañar la impresora.

CAMBIO DEL ROLLO DEL PAPEL

Nunca introduzca un rollo de papel roto. Esto causará atascos del papel. Corte siempre en primer lugar el borde anterior.

- Introduzca el borde del papel del rollo de papel en la abertura. (Fig. 1)
- Conecte la alimentación y haga avanzar el papel apretando . (Fig. 2)
- Levante el soporte metálico para papel incorporado e introduzca el rollo de papel en el soporte. (Fig. 3)



Fig. 2



Fig. 3

NO TIRE DEL PAPEL HACIA ATRÁS YA QUE PODRÍA OCASIONAR DAÑOS AL MECANISMO DE IMPRESIÓN.

MANERA DE CONECTAR EL ADAPTADOR DE CA

Esta calculadora puede también funcionar con corriente alterna usando un adaptador de CA. Cuando conecte adaptador de CA a la calculadora, la fuente de alimentación se conmutará automáticamente de pilas secas a corriente alterna.

Adaptador de CA: Modelo EA-63A, EA-28A

Make sure that you turn the calculator's power off when connecting or disconnecting the AC adaptor. To connect the AC adaptor, follow steps ① & ②. To disconnect the AC adaptor, simply reverse the procedure.

Asegúrese de desconectar la alimentación de la calculadora antes de conectar o desconectar el adaptador de CA. Para conectar el adaptador de CA, siga los pasos ① y ②. Para desconectar el adaptador de CA, invierta simplemente el procedimiento.

PRECAUCIÓN

El uso de otro adaptador que no sea el EA-63A/28A podría ocasionar la entrada de una tensión inadecuada a su calculadora SHARP y provocar deterioros en la misma.

CAMBIO DE PILAS (OPCIONALES)


Para instalar o cambiar las pilas — Cuando las pilas se debiliten, es posible que la impresión se detenga, y que las imágenes visualizadas desaparezcan. Cuando observe estos síntomas, reemplace las pilas por otras nuevas.


- Ponga el interruptor de la alimentación en "OFF".
- Saque la tapa de las pilas deslizando en el sentido indicado por la flecha de la tapa.
- Coloque nuevamente las pilas. Cerciórese de que las marcas "+" y "-" de las pilas correspondan con las marcas "+" y "-" de la calculadora. Siempre coloque las 4 pilas al mismo tiempo.
- Coloque nuevamente la tapa de las pilas.

Pilas: Pilas de manganeso, tamaño AA (o R6) × 4






ERRORS

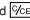There are several situations which will cause an overflow or an error condition. When this occurs, "E" will be displayed. The contents of the memory at the time of the error are retained.

If an "E 0." is displayed at the time of the error, "-----" will be printed in red and  will be used to clear the calculator.

Also, in rare cases, printing may stop midway and the indication "E" appear on the display. This is not a malfunction but is caused when the calculator is exposed to strong electromagnetic noise or static electricity from an external source. Should this occur, press the  key and then repeat the calculation from the beginning.

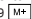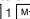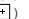Error conditions:

- When the integer portion of an answer exceeds 12 digits.
- When the integer portion of the contents of the memory or grand total memory exceeds 12 digits. (Ex.  9999999999  1 )
- When any number is divided by zero. (Ex. 5  0 )

REPLACEMENT OF BATTERY FOR MEMORY PROTECTION

Time for battery replacement

Life of the memory protection battery is approximately 2,500 hours at 25°C(77°F) with no operation battery installed, and the AC adaptor not connected.

* When the memory protection battery is weak, the date/time setting is initialised (1/1/2005, 12:00:00 a.m.).

Verify the date/time setting in the date/clock display mode after replacing the operation battery or when connecting the AC adaptor with no operation battery installed.

If the date/time setting is modified or incorrect, promptly replace the memory protection battery with new one.

(The life of the pre-installed battery may be shorter than expected because of the time the calculator spends during shipment.)

Method of battery replacement

Use one lithium battery (CR2032).

Caution: Replacing the battery will clear the date and time settings, and the stored tax rate.

- Set the power switch to the "OFF" position, and disconnect the AC adaptor.
- Remove the battery cover on the back of the unit. (Fig. 1)
- Remove the exhausted battery and install one new lithium battery. Wipe the battery well with a dry cloth and place the plus "+" side upward. (Fig. 2)
- Replace the battery cover by reversing the removal procedure.
- Press the RESET switch on the back of the unit (See "RESETTING THE UNIT").

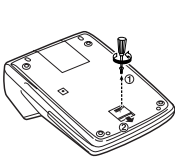 


Fig. 1

 


Fig. 2

After battery replacement

- Connect the AC adaptor, and set the power switch to the "ON" position. Check that "0." is displayed. If "0." is not displayed, remove the battery, reinstall it, and check the display again.
- Readjust date, time, and tax rate settings.
- On the battery replacement date label found on the back of the unit, write down the month and year when the battery is replaced, as a reference for the next battery replacement.

Precautions on battery use

- Do not leave an exhausted battery in the equipment.
- Do not expose the battery to water or flame, and do not take it apart.
- Store batteries out of the reach of small children.

Notes for handling Lithium batteries:

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type recommended by the manufacturer.
Dispose of used batteries according to the manufacturer's instructions.

SPECIFICATIONS

Operating capacity: 12 digits

Power supply:

Operating:

AC: Local voltage with AC adaptor EA-63A / 28A

6V \asymp (DC): Manganese dry battery, size AA (or R6) \times 4 (Option)

Memory backup:

3V \asymp (DC): (Lithium battery CR2032 \times 1)

Memory Protection Battery lifespan:

About 2,500 hours (While at 25°C(77°F), no operating battery is installed, and the AC adaptor is not connected.)

CLOCK SECTION

Accuracy: Within \pm 60 seconds per month average (at 25°C(77°F))

Items to be displayed: month, day, year, hour, minute, second, a.m. "A", p.m. "P"

Items to be printed: month, day, year, hour, minute, a.m. "A", p.m. "P"

Time system: 12-hour

PRINTING SECTION

Printer: Mechanical printer

Printing speed: Approx. 2 lines/sec.

(At temperature 25°C(77°F), when "741-9 + " is printed. An AC adaptor EA-63A is used. The printing speed will vary with the number of rows and the figure types to be printed.)

Printing paper:

57mm (2-1/4") \sim 58mm (2-9/32") wide

80mm (3-5/32") in diameter (max.)

Operating temperature:

0°C \sim 40°C (32°F \sim 104°F)

Power consumption: 6V \asymp (DC): 1.8 W

Operating time: Manganese dry battery, size AA (or R6)

Approx. 4,500 hours (in non-print mode, displaying 555'555 at 25°C (77°F) ambient temperature)

Operating time depends on the type of battery and type of use.

Dimensions:

150 mm (W) \times 230 mm (D) \times 51.5 mm (H)

(5-29/32" (W) \times 9-1/16" (D) \times 2-1/32" (H))

Weight: Approx. 530 g (1.17 lb.) (with batteries)

Accessories:

1 lithium battery(installed), 1 battery replacement date label (attached on the unit's back body), 1 paper roll, 1 ink roller (installed), AC adaptor EA-63A, and operation manual

 
RESETTING THE UNIT

Strong impacts, exposure to electrical fields, or other unusual conditions may render the unit inoperative, and pressing the keys will have no effect. If this occurs, you will have to press the RESET switch on the bottom of the unit. The RESET switch should be pressed only when:





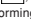
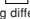



- an abnormal event occurs and all keys are disabled.

Notes:

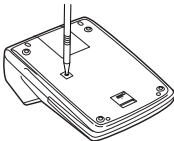- Pressing the RESET switch will clear the date and time settings, the tax rate setting, and the contents of memory.
- Use only a ballpoint pen to press the RESET switch. Do not use anything breakable or anything with a sharp tip, such as a needle.
- After the RESET switch is pressed, connect the AC adaptor. Turn the power switch "ON" and check that "0." is displayed.

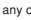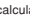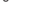

CALCULATION EXAMPLES

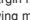- Set the decimal selector as specified in each example.
The rounding selector should be in the "5/4" position unless otherwise specified.
- The grand total/rate setting mode selector should be in the " " position (off) unless otherwise specified.
- The print / item count mode selector should be in the "P" position unless otherwise specified.
- Press   prior to beginning any calculation.
- If an error is made while entering a number, press  or  and enter the correct number.
- After entering a value, press   or  to activate the Cost/Sell/Margin Calculation mode. In case of performing different calculation tasks,   key must be pressed first to cancel the Cost/Sell/Margin mode.
- Example procedures are listed in following manner unless otherwise specified.






Operation	Display	Print
-----------	---------	-------

PRINTING DATE AND TIME


IMPRESIÓN DE LA FECHA Y LA HORA

EXAMPLE: When on October 20, 2005, 1:52:00 p.m.

EJEMPLO: En el 20 de octubre de 2005, a las 1:52:00 p.m.

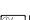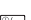
 1 	10-20-2005		#10-20-2005-*****
	0.		
  	1:52 00 P		#1:52 -----
	0.		


*1: If the date is not shown on the display, press  to show the date.

*1: Si la fecha no se muestra en el visualizador, pulse  para hacer que se indique.






ERRORES

Existen diversos casos en los que ocurre un exceso de capacidad o una condición de error. Al producirse esto, aparecerá "E". El contenido de la memoria, en el momento del error, se conservará.

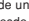Si, al ocurrir el error, se visualiza el símbolo "E 0.", se imprimirá en rojo "-----" y se deberá usar  para borrar la calculadora.

Además, en casos muy raros, la impresión puede pararse en la mitad, y en el visualizador puede aparecer la indicación "E". Esto no significa mal funcionamiento, sino que se debe a que la calculadora ha estado expuesta a ruido electromagnético intenso o electricidad estática de una fuente externa. Cuando ocurra esto, pulse la tecla  y después repita el cálculo desde el principio.

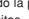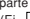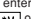Condiciones de error:

- Cuando la parte entera de un resultado excede las 12 dígitos.
- Cuando la parte entera del contenido de la memoria o la memoria del total global supere 12 dígitos. (Ej.  9999999999  1 )
- Cuando se divide un número cualquiera por cero. (Ej. 5  0 )

CAMBIO DE LA PILA PARA PROTECCIÓN DE LA MEMORIA

Plazo para cambiar la pila

La duración de la pila de protección de la memoria será de aproximadamente 2,500 horas a 25°C sin la pila de operación instalada, y el adaptador de CA no conectado.

* Cuando la pila de protección de la memoria se debilita, se inicializará la fecha/hora (1/1/2005, 12:00:00 a.m.).

Verifique el ajuste de la fecha/hora en el modo de visualización de la fecha/reloj después de haber reemplazado las pilas de operación o cuando conecte el adaptador de CA sin la pila de operación instalada.

Si el ajuste de la fecha/hora se ha modificado o es incorrecto, reemplace inmediatamente la pila de protección de la memoria por otra nueva.

(La duración de la pila instalada en fábrica puede ser más corta de la esperada debido al tiempo transcurrido desde el envío de la calculadora.)

Método de cambio de la pila

Utilice una pila de litio (CR2032).

Precaución: El reemplazo de la pila borrará los ajustes de la fecha y la hora, y la tasa de impuestos almacenada.

- Ponga el interruptor de la alimentación en la posición "OFF", y desconecte el adaptador de CA.
- Retire la cubierta de la pila de la parte posterior de la unidad. (Fig. 1)
- Retire la pila agotada e instale una pila de litio nueva. Limpie bien la pila con un paño seco y coloque el lado positivo "+" hacia arriba. (Fig. 2)
- Vuelva a colocar la cubierta de la pila siguiendo a la inversa el procedimiento de retirada.
- Pulse el interruptor RESET de la parte posterior de la unidad (Consulte "REPOSICIÓN DE LA UNIDAD").

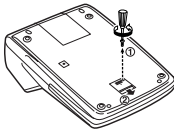 


Fig. 1

 


Fig. 2

Después de cambiar la pila

- Conecte el adaptador de CA, y ponga el interruptor de la alimentación en la posición "ON". Compruebe que se visualice "0.". Si no se visualiza "0.", retire la pila, vuelva a instalarla y compruebe de nuevo la visualización.
- Reajuste la fecha, la hora, y la tasa de impuestos.
- En la etiqueta de fecha de cambio de la pila colocada en la parte posterior de la unidad, escriba el mes y el año del cambio de la pila. Esto le servirá de referencia para el próximo cambio de la pila.

Precauciones al utilizar la pila

- No deje una pila descargada en el equipo.
- No exponga la pila al agua ni a las llamas, y no la desarme.
- Guarde las pilas donde no puedan alcanzarlas los niños.

Notas para el manejo de las baterías de litio:

PRECAUCIÓN

Peligro de explosión si reemplaza incorrectamente la batería.
Reemplácela por otra igual o de tipo equivalente recomendada por el fabricante.
Deshágase de las baterías de acuerdo con las instrucciones del fabricante.

ESPECIFICACIONES TÉCNICAS

Capacidad de cálculo: 12 dígitos

Fuente de alimentación:

En funcionamiento:

CA: Voltaje local usando el adaptador de CA, EA-63A / 28A

6V \asymp (CC): Pilas de manganeso, tamaño AA (o R6) \times 4 (opcionales)

Protección de la memoria:

3V \asymp (CC): (pila de litio CR2032 \times 1)

Duración de la pila de protección de la memoria:

Aprox. 2,500 horas (A 25°C, sin pilas instaladas, y el adaptador de CA no conectado.)

SECCIÓN DEL RELOJ

Precisión: Dentro de \pm 60 segundos por mes como promedio (a 25°C)

Elementos visualizados: mes, día, año, hora, minutos, segundos, a.m. "A", p.m. "P"

Elementos a imprimirse: mes, día, año, hora, minutos, a.m. "A", p.m. "P"

Sistema de indicación de la hora: 12 horas

SECCIÓN DE LA IMPRESORA

Impresora: Impresora mecánica

Velocidad de impresión: Aprox. 2 líneas/seg.

(A una temperatura de 25°C, cuando se imprime "741-9 + ". Se utiliza un adaptador de CA, EA-63A. La velocidad de impresión variará con el número de filas y los tipos de dígitos que se deseen imprimir.)

Papel de impresión:

57 mm \sim 58 mm de ancho,

80 mm de diámetro (máx.)

Temperatura de funcionamiento: 0°C \sim 40°C

Consumo de energía: 6V \asymp (CC): 1.8 W

Tiempo de funcionamiento: Pilas de manganeso, tamaño AA (o R6)

4,500 horas aproximadamente (en el modo de no impresión, visualizando 555'555 con una temperatura ambiental de 25°C)

El tiempo de funcionamiento dependerá del tipo de las pilas y de la forma de utilización.

Dimensiones:

150 mm (An.) \times 230 mm (Pr.) \times 51.5 mm (Al.)

Peso: Approx. 530 g (con pilas)

Accesorios:

1 pila de litio (instalada), 1 etiqueta con la fecha de reemplazo de la pila (colocada en la parte posterior de la unidad), 1 rollo de papel, 1 rodillo entintador (instalado), adaptador de CA, EA-63A y manual de manejo

REPOSICIÓN DE LA UNIDAD

Los impactos fuertes, la exposición a campos eléctricos u otras condiciones inusuales pueden ser la causa de que la unidad no funcione, y pulsar las teclas no servirá de nada. Si pasa esto, tendrá que pulsar el interruptor RESET de la parte inferior de la unidad. El interruptor RESET sólo deberá pulsarse cuando:






- Se produzca alguna anomalía y no funcione ninguna tecla.

Notas:

- Si pulsar el interruptor RESET, se borrarán los ajustes de la fecha, la hora, la tasa de impuestos, y el contenido de la memoria.
- Use solamente un bolígrafo para pulsar el interruptor RESET. No use nada que pueda romperse ni tampoco algo muy puntiagudo como, por ejemplo, una aguja.
- Después de pulsar el interruptor RESET, conecte el adaptador de CA. Ponga el interruptor de la alimentación en "ON" y compruebe que se visualice "0.".

ADDITION AND SUBTRACTION WITH ADD MODE



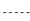


 
SUMA Y RESTA CON MODO DE SUMA

*2	1245  1624  1931  525  1245 	12.45 28.69 48.04 42.83	12-45 + 16-24 + 19-35 + 5-21 - 42-83 *
		002-*****	
		42.83	


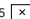

*2:  was not used in the entries.

*2: La  no ha sido usada en las introducciones.

MIXED CALCULATIONS / CÁLCULOS MIXTOS

A. 5 \times 2 + 12 =			   
5  2 	5.	5. \times 2+ 10 \times *	
	10. 10. 22.	10+ 12+ 22 \times *	
	22.	002-*****	

CONSTANT / CONSTANTES

A. 62.35 \times 11.11 = ① 62.35 \times 22.22 = ②			
62.35  11.11 	62.35	62-35 \times 11-11 = 692-7085 * ①	
	692.7085	22-22 = 1-385-417 * ②	
	1'385.417		

PERCENT / PORCENTAJES











A. 100 \times 25% =			
100  25 	100.	100 \times 25% 25-00 *	
	25.00		

ITEM COUNT CALCULATION
CÁLCULO DE CUENTA DE ARTÍCULOS

Bill No. Núm. de factura	Number of bills Núm. de facturas	Amount Importe
1	1	\$100.55
2	1	\$200.00
3	1	\$200.00
4	1	\$400.55
		\$500.65
Total	(a)	(b)

		F3320A		OFF	ON
		OFF		ON	
VCE	VCE				
100.55	+	100.55		100-55	+
200	+	300.55		200-00	+
	+	500.55		200-00	+
400.55	+	901.10		400-55	+
500.65	+	1'401.75		500-65	+
	*			500-65	+
				005	(a)
				1'401-75	★ (b)
		1'401.75			

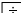MEMORY / MEMORIA

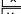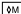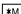46 × 78 = ① +) 125 ÷ 5 = ② -) 72 × 8 = ③ ----- Total ④			F320A 	GT SET 
*3				
46  78 	46.	46 × 78 = 3-588+ +M ①		
	M	3'588.		
125  5 	M	125. 5+ 25+ +M ②		
	M	25.		
72  8 	M	72. 8= 576- -M ③		
	M	576.		
	M	3'037.	3-037- OM ④	
		3'037.	3-037- xM	